


BLK BOX

FULL RACK GOLIATH

21-0111-0J

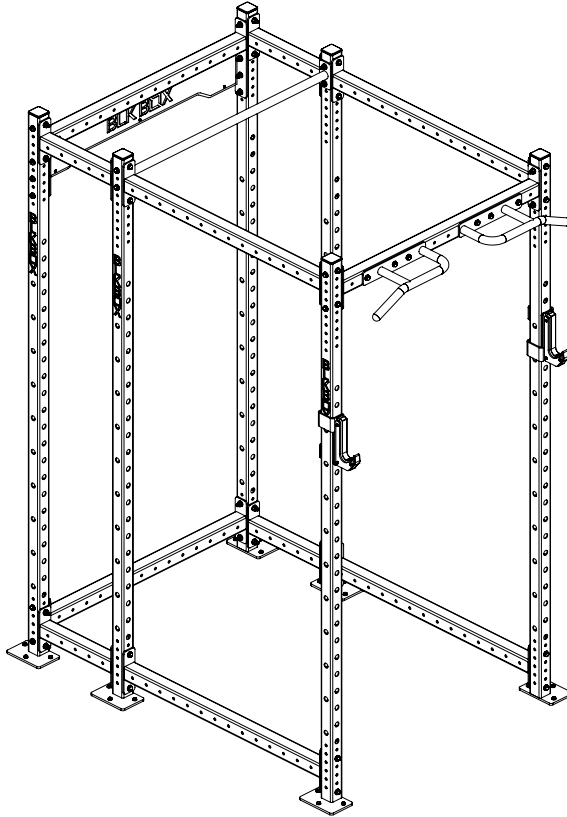

PRODUCT SPECIFICATION

PRODUCT WEIGHT	-	165kg
MAX USER WEIGHT	-	125kg
MAX USER	-	2
MAX TRAINING WEIGHT	-	300kg
DIMENSIONS	-	1200mm x 2408mm x 1660mm
SAFE WORKING ZONE	-	2700mm x 3272mm x 2860mm

OWNERS MANUAL & QUICK START GUIDE

NOTE : PLEASE READ ALL THE INSTRUCTIONS
CAREFULLY BEFORE ASSEMBLING THIS PRODUCT.

WARNING

SERIOUS OR FATAL INJURIES MAY OCCUR FROM INCORRECTLY ASSEMBLED EQUIPMENT. ALWAYS ENSURE BOLTS ARE TIGHTENED CORRECTLY AND ALL PARTS ARE LEVEL AND PLUMB. TO FURTHER REDUCE RISK OF INJURIES OR DEATH PLEASE USE OUR SUGGESTED TOOLS AND PERSONAL PROTECTIVE EQUIPMENT (PPE). WE SUGGEST THAT A MINIMUM OF THREE PEOPLE ARE INVOLVED IN THE ASSEMBLY OF THIS PRODUCT. EACH PERSON SHOULD BE EQUIPPED WITH SAFETY GLASSES, STEEL TOE CAP BOOTS AND EAR PLUGS.



PLEASE BE AWARE OF THIS SYMBOL AS AN INDICATION TO CHECK THAT A PART IS LEVEL OR PLUMB.



THIS SYMBOL IS AN INDICATION OF THE RECOMMENDED TORQUE EACH BOLT SHOULD BE TIGHTENED TO. THIS VALUE WILL BE DEPENDENT ON THE BOLT TYPE. PLEASE HAND TIGHTEN ALL BOLTS UNTIL YOU SEE THIS SYMBOL.








TOOLS REQUIRED

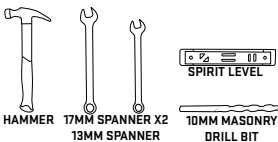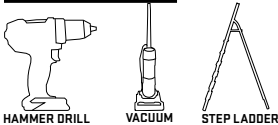

No.	Name	SKU	QTY
1	2.4 UPRIGHT DNA60 WITH FEET	21-0036-0A	6
2	1.2 BRANDING BOX CM DNA60	21-0017-0A	1
3	1.2 SINGLE BAR CM DNA60	21-0015-0A	1
4	1.2 BOX CM DNA60	21-0013-0A	6
5	MULTIGRIPS DNA60	21-0151-0A	1
6	0.4 BOX CM DNA60	21-0036-0A	4
7	J-HOOKS PAIR	16-0001	1
8	M10X80 SLEEVE ANCHOR	10-0031	18
9	M10X90 BOLT	10-0008	44
10	M10 FLAT WASHER	10-0019	106
11	M10 NYLOCK NUT	10-0024	44


PARTS & ATTACHMENTS

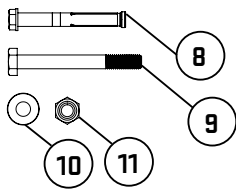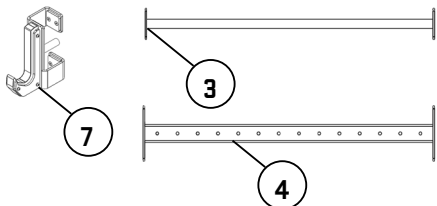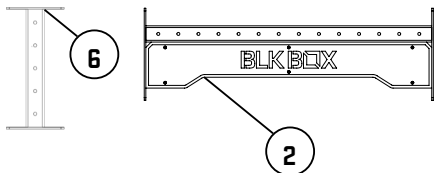

ASSEMBLY


1

BOLT 1QTY BRANDING BOX (21-0017-0A) AND 1QTY 1.2 BOX (21-0013-0A) BETWEEN 2QTY UPRIGHTS (21-0036-0A) WITH BOLTS ASSEMBLY AS SHOWN. ENSURE LOGO ON BRANDING BOX (21-0017-0A) IS FACING FORWARD, LOGOS ON UPRIGHTS ARE FACING OUTWARD AND ALL BOLTS FACING INWARDS.

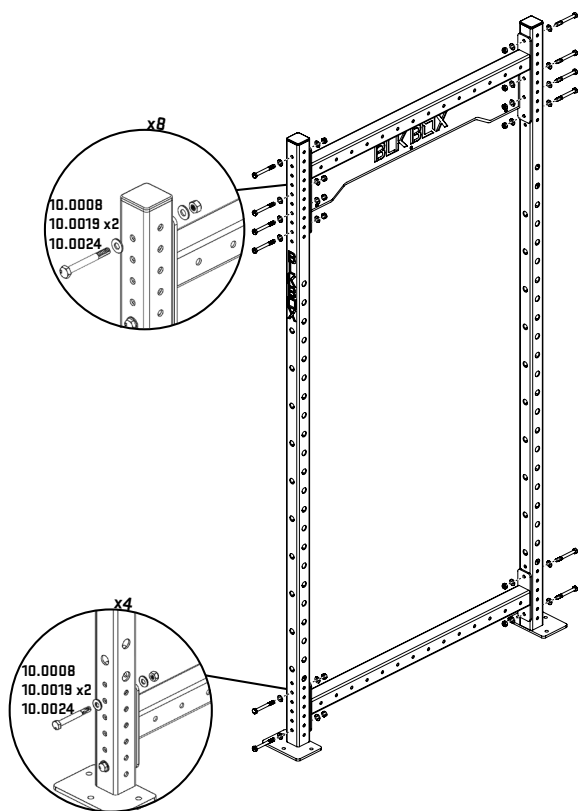


2

BOLT 1QTY 1.2 SINGLE BAR (21-0015-0A) BETWEEN 2QTY UPRIGHTS (21-0036-0A) AND CONNECT TO EXISTING ASSEMBLY USING 4QTY BOX (21-0036-0A) WITH BOLT ASSEMBLY AS SHOWN. ENSURE LOGO ON UPRIGHTS ARE FACING OUTWARD AND BOLTS ARE FACING INWARD.

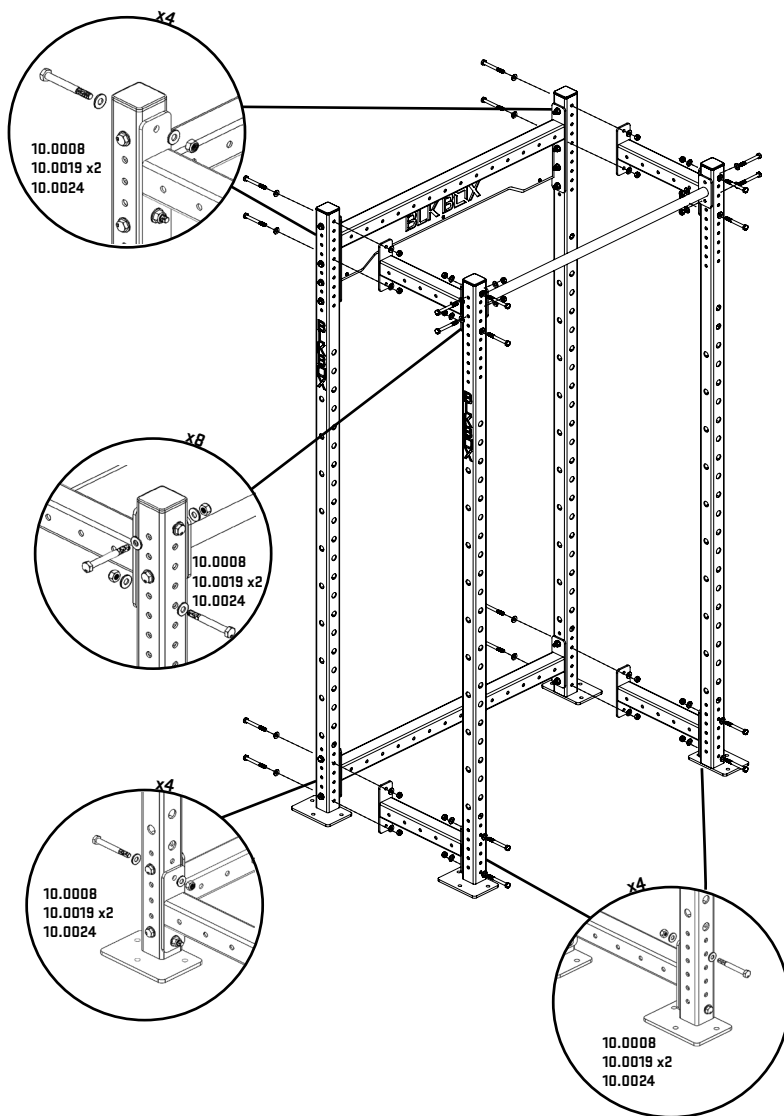


3

BOLT 1QTY 1.2 BOX (21-0013-0A) BETWEEN 2QTY UPRIGHTS (21-0036-0A) AND CONNECT TO EXISTING ASSEMBLY USING 4QTY BOX 1.2 BOX (21-0013-0A) BOLT 1QTY MULTIGRIPS (21-0151-0A) TO 1QTY 1.2 BOX (21-0013-0A) WITH BOLT ASSEMBLY AS SHOWN, ENSURE LOGO ON UPRIGHTS ARE FACING OUTWARD AND BOLTS ARE FACING INWARD.

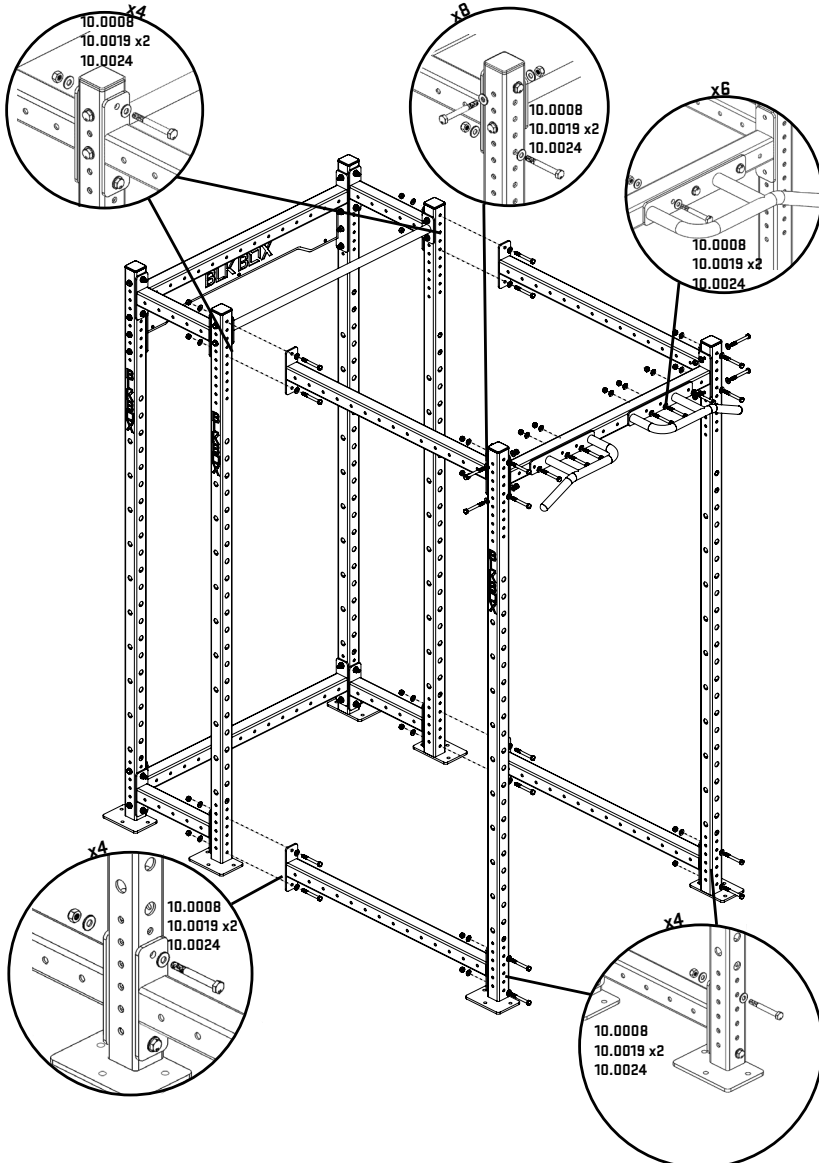


4

TIGHTEN ALL BOLT ASSEMBLIES WITHIN THE CIRCLE TO SPECIFIED TORQUE. ENSURE ALL UPRIGHTS ARE PLUMB. DRILL AND SECURE THE MIDDLE HOLE ON EACH UPRIGHT AS SHOWN IN GUIDE. REMOVE ALL BOTTOM CROSSMEMBERS, DRILL AND SECURE REMAINING HOLES ON UPRIGHTS AS SHOWN IN GUIDE. REATTACH THE BOTTOM CROSSMEMBERS.

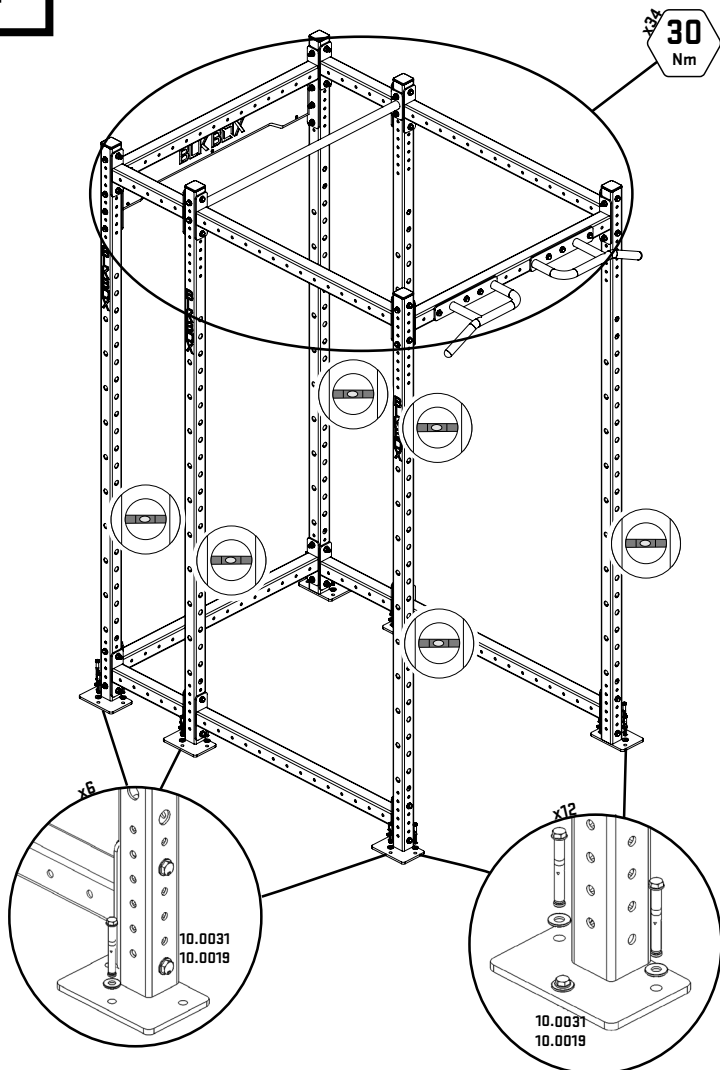


SLEEVE ANCHOR BOLT FITTING

- DRILL 10MM HOLE THROUGH FLOOR COVERING, 90MM DEEP USING PLATE AS A GUIDE.
- VACUUM OUT THE DUST.
- HAMMER SLEEVE ANCHOR DOWN INTO THE HOLE.
- TIGHTEN SLEEVE ANCHOR TO SPECIFIED TORQUE USING 13MM SPANNER.

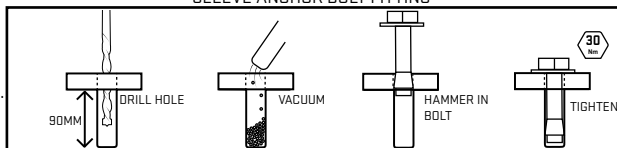


5

TIGHTEN ALL REMAINING BOLTS TO SPECIFIED TORQUE.

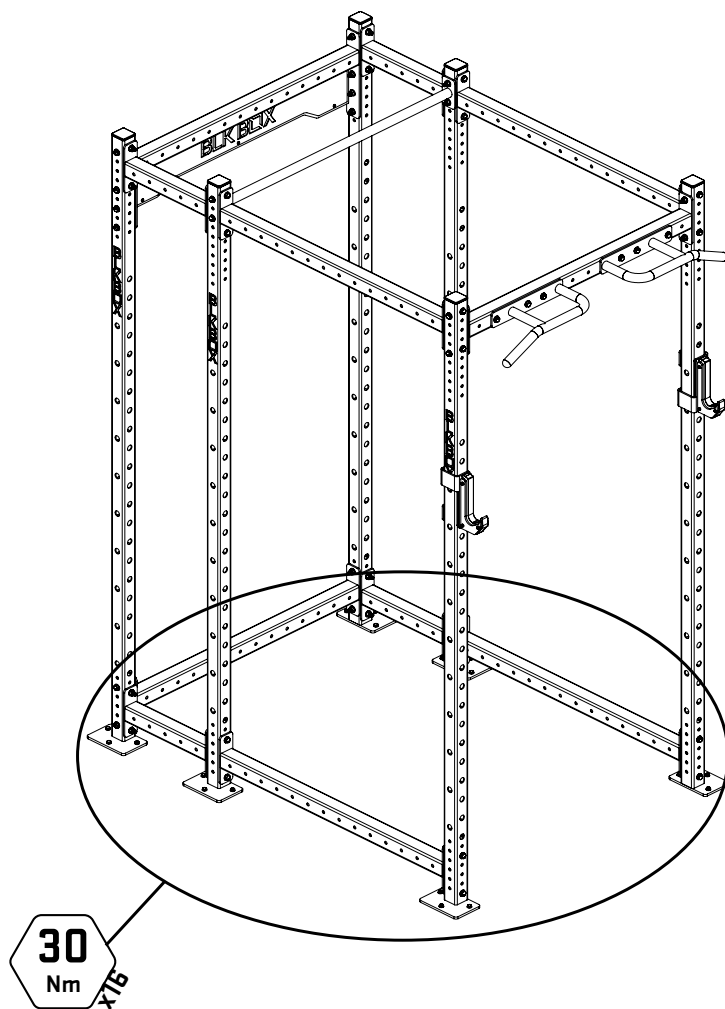


1:1 SCALE FASTENERS


M10x80 SLEEVE ANCHOR
10-0031

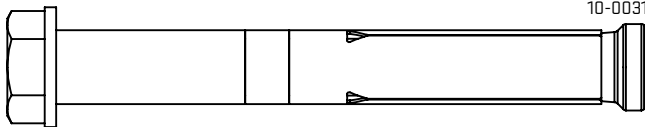


M10x90 BOLT
10-0008

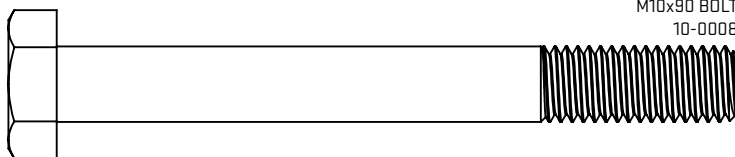

M10 FLAT WASHER
10-0019

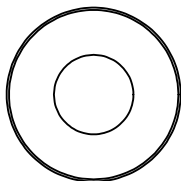

NYLOCK NUT
10-0024

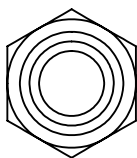

FOR TERMS AND CONDITIONS VISIT OUR WEBSITE AT
www.blkboxfitness.com/pages/terms-conditions

GET IN TOUCH
TEL: 028 9045 4123
EMAIL: info@blkboxfitness.com

DISCOVER MORE AT:
www.blkboxfitness.com